



1. Name and parts

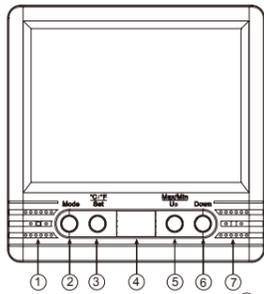


1. Mode button
2. °C/°F switch & Set button
3. PIR sensor
4. Max/Min switch & Up button
5. Down button
6. Lens

8. Power switch
9. Format button
10. Memory card slot
11. USB port
12. Rec/Photo switch
13. HD/VGA switch
14. Overwrite switch
15. Microphone switch
16. Power LED
17. Rec/Photo LED
18. Charge LED
19. Buzzer
20. Reset button

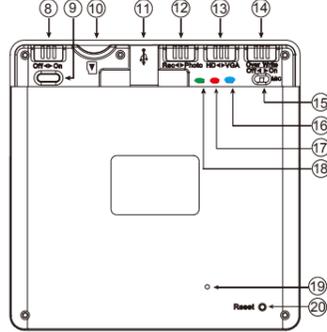


(1)


2. Package content

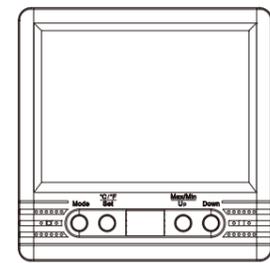


Main device

 

Stand

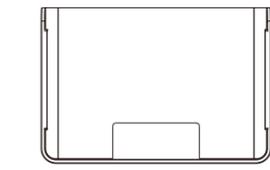

Wall stand

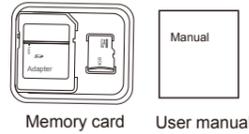

Memory card

User manual



USB cable



Double-side tape




Cleaning


Cleaning accessory

(2)

3. Charging the battery

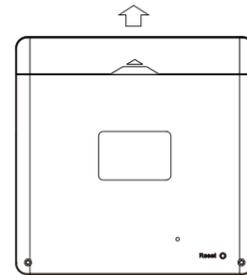


1. Connect the device to PC via USB cable.
2. When the battery is fully charged the green indicator will turn off.

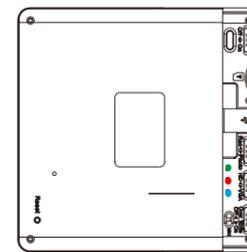


(3)

4. Format memory card

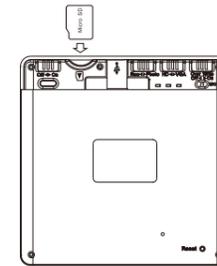

1. Insert the memory card as shown in the illustration.

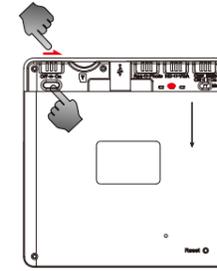


2. Press and hold the ⑨ then power on the device. The red indicator will flash when the memory card is being formatted. The red light will turn off when the memory card format completed.

(4)

5. Installation

A. Wall stand

1. Slide on the wall stand cover.
2. Clean the backside surface of the device before applying the double-side adhesive tape.
3. Clean the area of the wall you intend to install the device, peel the film from double-side adhesive tape on the device then pasting the device onto the wall.
4. Under standby status the battery can last about 5-6 days.

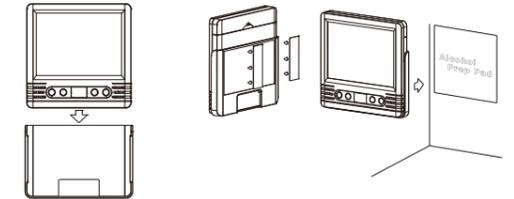

B. Table Stand


1. Slide the device downwards into the table stand until properly assembled.



(5)

6. Setting


1. Select operation mode by sliding Photo/Rec switch to place.
2. Video: Whenever the PIR sensor is triggered, the DVR automatically starts recording. Please note the length of video varies from 5 seconds to 2 minutes depending on the movement detection.
3. Photo: The device takes 3 photos whenever the PIR sensor is triggered.
4. Resolution setting by sliding VGA/HD switch to place.
5. Video resolution: VGA(640X480@30fps)
HD(1280X720@30fps)
6. Photo resolution: 2MP(1600X1200 .JPG)
7. LED indicator
8. Blue(Power): Blue indicator lights on when the device is powered on.
9. Red(Rec): Red indicator lights on when recording video or taking photo.
10. Green(Charge): Green indicator lights on when charging and turn off when battery is fully charged.

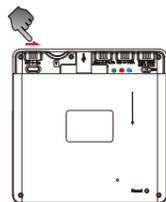

(6)

7. Download videos and photos from DVR

1. Video and photo files are stored in the memory card.
2. There are two ways to download video/photo files.
3. Using the memory card reader to download video/photo files.
4. With the device powered on and memory card inserted, connect the device to PC by USB connection. It will be recognized by PC as an external drive for user to download the video recordings and photo files.

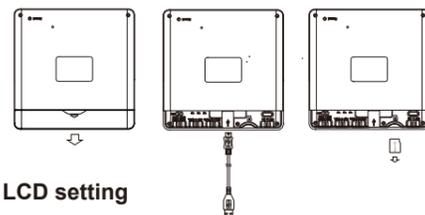


8. LCD setting

■ Time

1. Press Mode button to change the clock to show normal time show mode.
2. Long press Set button to access the time setting.
3. Press Up/Down button to select 12H/24H.
4. Press Set button again into hour and minute selection.
5. Press Up/Down button to set the hour and minute.
6. Press Mode button to retreat from the time setting.

(7)

9. Display Setting

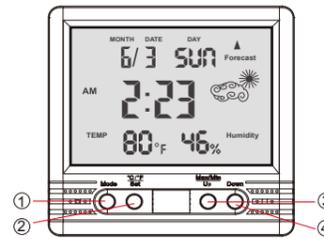

a. Alarm

1. Press Mode button ① to select the alarm display on LCD.
2. Long press Set button ② to access the alarm setting.
 - 2.1 Press Up/Down button ③ ④ to set the hour and minute.
3. Press Mode button ① to retreat from the time setting.
4. Back to display mode press Up button ③ to switch on the alarm setting.

b. Date

1. Press Mode button ① to select the year display on LCD.
2. Long press Set button ② to access the date setting.
3. Press Up/Down button ③ ④ to set up year.
4. Press Set button ② again into month and date selection.
5. Press Up/Down button ③ ④ to set up month and date.
6. Press Mode button ① to retreat from the date setting.

(8)

c. TIME

1. Long press set button ② to access the time setting
2. Select 24-hour or 12-hour clock by pressing Up and Down ③ ④
3. Press set to modify the time, using up and Down ③ ④ to change the time.
4. Press Mode button ① to retreat from time setting

d. Temperature and humidity


1. Every 20 seconds the system detects automatically the temperature and humidity.
2. Temperature detecting from -49°C~69°C(-56°F~156°F).
3. In normal mode press °C/°F button ② to switch to Centigrade or Fahrenheit.
4. The humidity detecting from 20%~89%.
5. If the system cannot detect the temperature and humidity LCD will display " _ °C" and " _ %".

e. MAX/MIN

1. The system memorizes the recent maximum and minimum temperature and humidity.
2. In normal mode press once MAX/MIN button ③ to display the maximum temperature and humidity.
3. In normal mode press twice MAX/MIN button ③ to display the minimum temperature and humidity.
4. In normal mode press three times MAX/MIN button ③ to display the current temperature and humidity.
5. In normal mode long press MAX/MIN button ③ for two seconds to eliminate the MAX/MIN data and the system will rememorize the newest temperature and humidity.

(9)

PV-TM10 Thermometer & Clock 720P Covert DVR Quick Guide

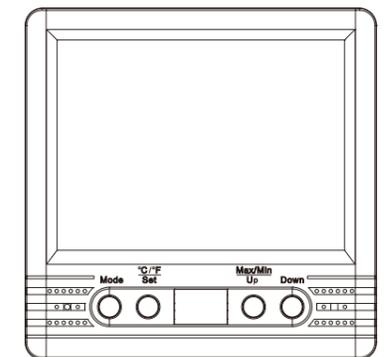

LawMate
Law Enforcement Products Manufacturer